


# *RS<sup>+</sup> Series*

Interactive Touch Screen

**Quick Start Manual**

-V1.0-

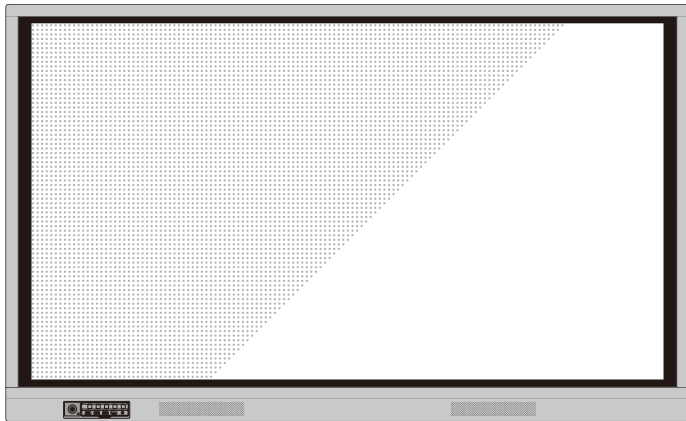

newline



Welcome to the world of **NEWLINE**.

Thank you for choosing the **NEWLINE** RS series Interactive Touch Screen.  
Please use this document to get the most out of your screen.

---

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

NOTE 1: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

NOTE 2: Any changes or modifications to this unit not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

---




The symbol of the crossed out wheeled bin indicates this product should not be placed in municipal waste. Instead, dispose of waste equipment by handing it over to a designated collection point for the recycling of electrical and electronic equipment.



# Symbol Conventions






---

Symbols are used in this document to indicate operations that need particular attention. The symbols are defined as follows:

 <b>NOTE</b>	Provides additional information to supplement operation in the main text.
 <b>CAUTION</b>	Indicates a potentially hazardous situation that, if not avoided, could result in equipment damage, data loss, performance deterioration, or unanticipated results.
 <b>WARNING</b>	Indicates a hazard with risk that, if not avoided, could result in death or injury.

# Safety Instruction

For your safety, please read the following instruction before you use the product. Serious injury or property damage may be caused by improper operations. Do not try to repair the product on your own.

 <b>WARNING</b>	
	<p><b>Disconnect the product from the power supply immediately if major failures occur.</b></p> <p>Major failures include the following:</p> <ul style="list-style-type: none"> <li>• If smoke, a peculiar smell or an abnormal sound is discharged from the product.</li> <li>• No image or sound is displayed, or the image error occurs.</li> </ul> <p>In the preceding scenarios, do not continue to use the product. Disconnect power supply immediately and contact professional staff for troubleshooting.</p>
	<p><b>Do not drop any liquids, metal or anything combustible onto the product.</b></p> <ul style="list-style-type: none"> <li>• If any liquid or metal are dropped onto or into the product, power off the product and disconnect the power supply, Then contact professional staff for solutions.</li> <li>• Pay attention to children when they are close to the product.</li> </ul> <p><b>Put the product on a stable surface.</b></p> <p>An unstable surface includes, and is not limited to an inclined plane, a shaky stand, desk or platform, that might cause the product to turnover and be damaged.</p>
	<p><b>Do not open the panel or change the product on your own.</b></p> <p>High voltage components are installed in the product. When you open the panel, high voltage, electric shock, or other dangerous situations may occur.</p> <p>If inspection, adjustment, or maintenance is required, contact the local distributor for help.</p>
	<p><b>Use the provided power supply.</b></p> <ul style="list-style-type: none"> <li>• To prevent the product from being damaged, do not use any types of power cables other than the one provided with the product.</li> <li>• Use a three-wire socket and ensure that it is properly grounded.</li> <li>• Pull out the power plug from the socket if the product is not used for a long period.</li> </ul> <p><b>Clean the power plug regularly.</b></p> <ul style="list-style-type: none"> <li>• Fire or electric shock may be caused if the product is powered on, while you are cleaning.</li> <li>• Pull out the power plug before cleaning it with a dried cloth.</li> </ul> <p><b>Power output port is 5V/2A.</b></p> <p>The voltage/current of the rear power output port is 5 V/2 A (maximum). Purchase the power code/AC adapter according to customer needs. Please do not connect any products with different power requirement. Otherwise, it may cause damage to products or fire.</p>

## **WARNING**



### **Do not put items on the top of the product.**

- Do not put items, such as a container for liquid (a vase, flowerpot, cosmetics or liquid medicine) on the top of the product.
- If any water or liquid is spilled on the product, the product may short circuit cause fire or electric shock.
- Do not walk on or hang any items on the product.



### **Do not install the product in an improper place.**

- Do not install the product in humid places, such as the bathroom, the shower room, near windows, or outdoor environments that experience rain, snow or other harsh weather. Avoid installation near hot spring vapor. The preceding environments may cause faults in the product or electric shock under extreme conditions.
- Do not put an exposed fire source, such as a lit candle on the product.



### **Pull out the power supply during thunderstorms.**

- Do not touch the product during a lighting storm, you may experience an electric shock.
- Install or place components that supply high enough voltage to cause personal injury out of the reach of children.



### **Do not touch the power cable with wet hands.**

## **CAUTION**



### **Do not install the product in high temperature environments.**

- Do not install the product near a heat source, such as a radiator, a heat reservoir, a stove or other heating products.
- Do not expose the product to direct sunlight, which may cause high temperatures and subsequent faults in the product.



### **When transporting the product:**

- Pack the product for transport or maintenance by using the cartons and cushioning material provided with the product.
- Move the product vertically during transport. The screen or other components are easily broken if the product is moved in an improper way.
- Before you move the product, disconnect all external connections and separate all topple preventing products. Move the product carefully to prevent it from being hit or squeezed, especially the screen, which may cause injury if broken.



### **Do not cover or block up any vents on the product.**

- Any overheated components may cause fire, damage the product, and shorten the service life.
- Do not lay the product down in a way where the venting surface will be covered.
- Do not install the product on carpet or cloth.
- Do not use a cloth such as table cloth to cover the product.

## CAUTION

### **Keep the product away from the radio.**

The product complies with the international EMI standard to prevent radio interference. However, interference may still exist and cause noise in the radio. If noise occurs in the radio, try the following solutions.

- Adjust the direction of the radio antenna to avoid the interference from the product.
- Keep the radio away from the product.

### **If the screen glass is broken or falls off.**

- Keep all personnel 10 feet away from the screen to ensure safety.
- Do not perform any installation or disassembly while the screen glass is broken or has fallen off.

### **Use the battery correctly.**

- Galvanic corrosion, electric leakage, and even fire may be caused by improper battery usage.
- It is recommended to use the designated type of battery and install the battery by the correct electrodes (positive and negative).
- Do not install and use a new battery with a used one.
- Take out the battery if the remote control is not used for a long period.
- Do not expose the battery to overheated environments such as sunlight and or heat sources.
- Dispose of the used battery based on your local regulations.

### **Do not damage the power cable.**

- Do not damage, change, twist, bend, or forcibly drag the power cable.
- Do not put weights (such as the product itself) on the power cable.
- Do not forcibly drag the cable when you pull out the power plug. If the power cable is damaged, please contact the local distributor to repair or replace it.
- The power cable in the accessory box is for this product only. Do not use it on other products.

### **Additional advice:**

- Use the product in an environment with comfortable lighting. It is harmful to your eyes to watch in a too bright or too dark environment.
- Relax your eyes watching for a period of time.
- Keep sufficient distance from the product to protect your eyes and prevent eyestrain.
- Adjust the volume to an appropriate level, especially at night.
- Use amplifier equipment as the audio input source with caution. If you must use amplifier equipment, the input power should not exceed the maximum of speaker power. Otherwise, the speaker can become overpowered and damaged.

### **About USB port.**


Front USB ports and rear USB 3.0/USB 2.0 ports switch connections based on signal sources. If the current signal source is reading the data from an external product connecting to the port, please switch the signal source after the data reading is complete. Otherwise, the data or product may be damaged.



# Parts and Functions


## Parts

### Front View

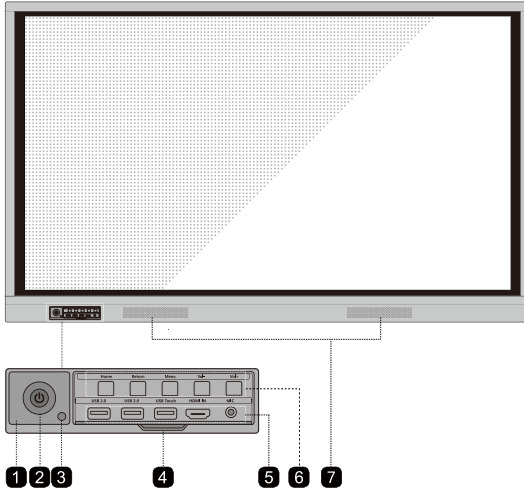


### Rear View

• 65 inch

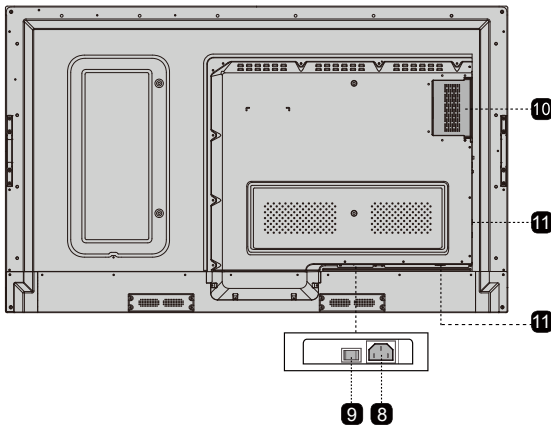



• 75 inch / 86 inch

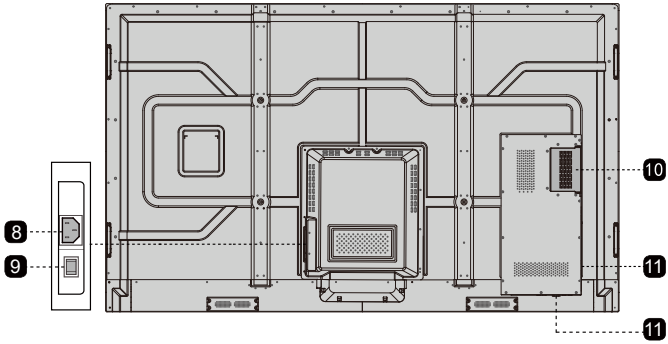

<b>1</b>	Remote control receiver	<b>7</b>	Speakers
<b>2</b>	Power On/Off	<b>8</b>	Power Supply Plug
<b>3</b>	Light sensor	<b>9</b>	Power Switch
<b>4</b>	Front Plate Cover	<b>10</b>	Internal PC Port (OPS)
<b>5</b>	Front Ports	<b>11</b>	Rear Ports
<b>6</b>	Front Buttons		

## Ports




### CAUTION

Front USB ports and rear USB 3.0/USB 2.0 ports switch connections based on signal sources. If the current signal source is reading the data from an external product connecting to the port, please switch the signal source after the data reading is complete. Otherwise, the data or product may be damaged.

---

### Front Ports

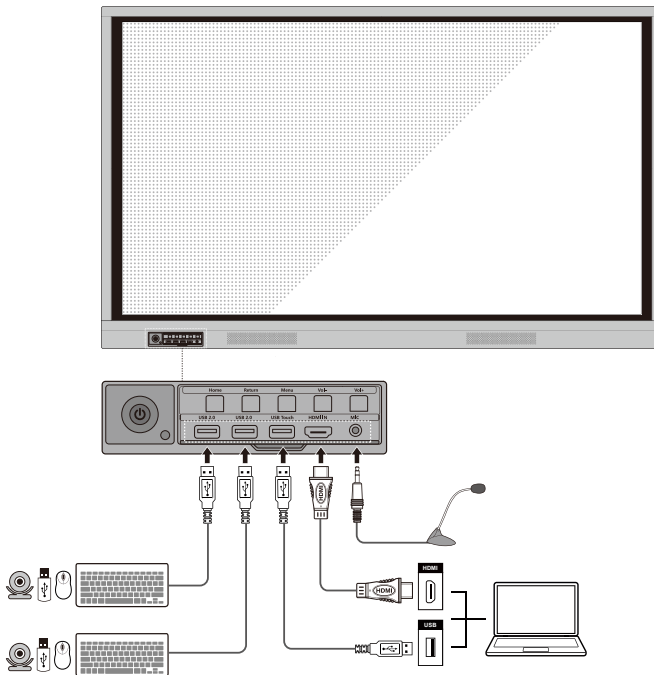


### Rear Ports





### WARNING


The voltage/current of the rear power output port is 5 V/2 A (maximum). Purchase the power code/AC adapter according to customer needs. Please do not connect any products with different power requirement. Otherwise it may cause the damage to products or fire.

---


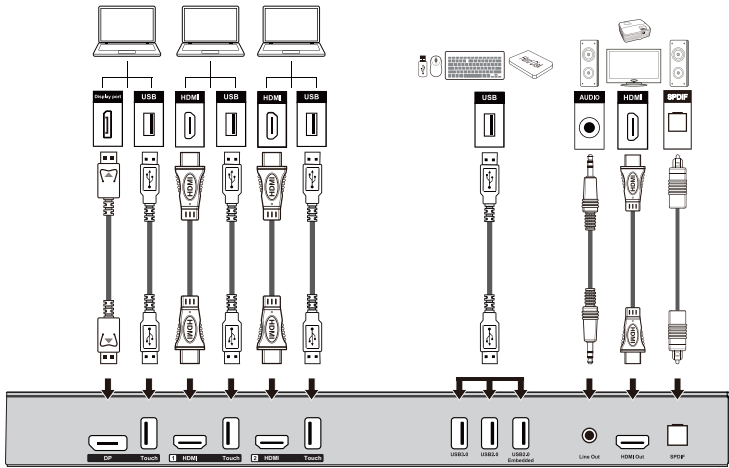


• 65 inch

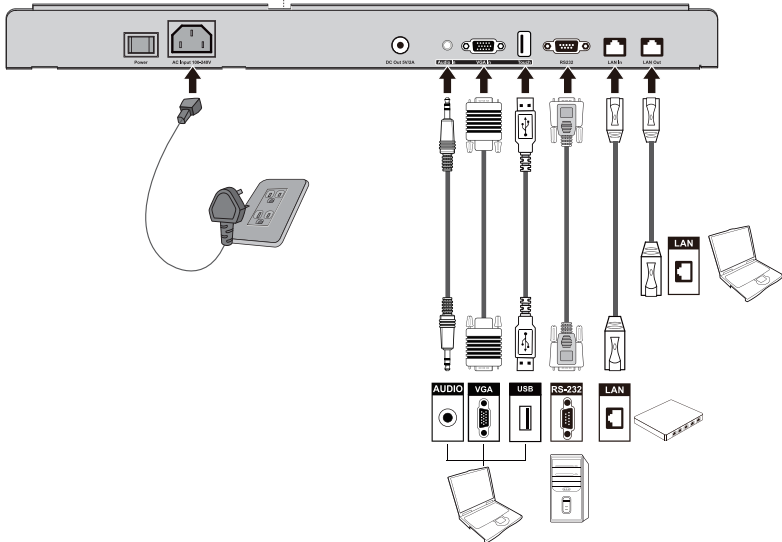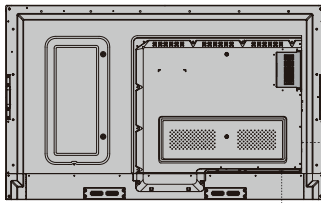


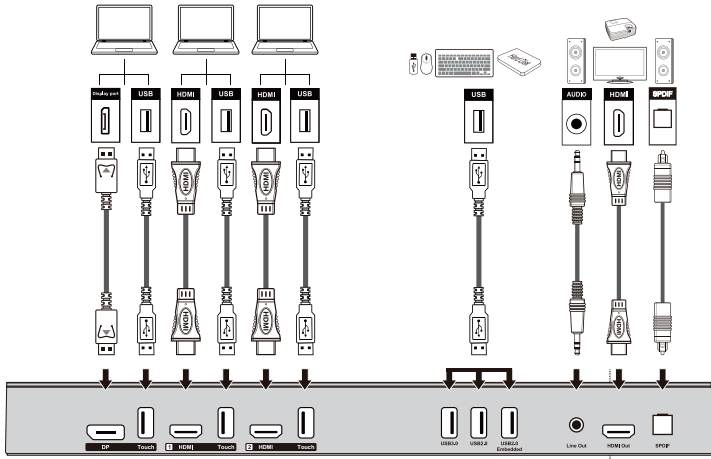


• 75 inch / 86 inch

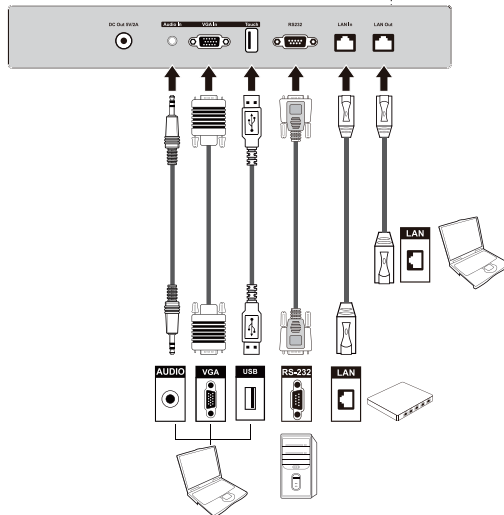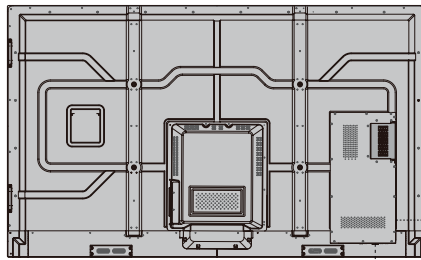

## Front Buttons

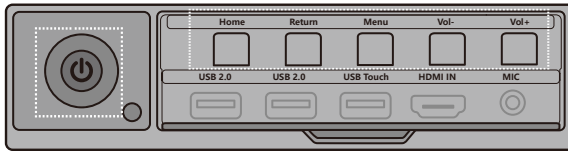

Buttons	Operations	Functions
	Short press	Power on/off <ul style="list-style-type: none"> <li>Steady red color : Display is in shut down mode</li> <li>Steady white color : Display is on and working</li> </ul>
<b>Home</b>	Short press	Go to the home page
<b>Return</b>	Short press	Return to the last menu/Exit
<b>Menu</b>	Short press	Open the Settings menu
	Long press for more than 2 seconds	Lock the screen
<b>Vol-</b>	Short press	Decrease the sound volume
	Long press for more than 1 second	Continuously decrease the sound volume
<b>Vol+</b>	Short press	Increase the sound volume
	Long press for more than 1 second	Continuously increase the sound volume

## Remote Control



### CAUTION

Carefully read the following instructions before using the remote control to avoid possible faults:

- Do not drop or damage the remote control.
- Do not spill water or other liquids on the remote control.
- Do not place the remote control on a wet object.
- Do not place the remote control directly under sunlight or near a heat source.

Buttons	Functions
	Power On/Off
	Mute/Unmute Audio
1-9	Enter number
	Go to the Home Page
	Return to Previous/Exit
	Up/Down/Left/Right
	Confirm/OK
	Enter Whiteboard Mode
	Take a Screenshot
	Enable Sound Only Mode
	Freeze the Current Screen, Click Again to Exit Freeze Function
	Adjust the Sound Volume
	Adjust the Brightness
	Enter the Source Selection Page
	View Currently Running Applications
	Open the File Manager
	View all Pre-installed Applications
PC	Switch Source to Internal PC
DP	Switch Source to Display Port
HDMI FRONT	Switch Source to HDMI Front
HDMI 1	Switch Source to HDMI 1
HDMI 2	Switch Source to HDMI 2
VGA	Switch Source to VGA

Buttons	Functions
	Autocorrection Screen Display (For VGA Signal Source)
	Open the Browser Application
	Toggle Display Backlight Mode
	Start/Exit the Screen Lock Function
	<ul style="list-style-type: none"> <li>• Open the Menu (Short Press)</li> <li>• Screen Lock (Long Press for More than 2 Seconds)</li> </ul>
	Open the System Settings



# Installation Guide

## Safety Precautions

### Installation Environment



Avoid Electric Shock



Avoid Strong Magnetic Field



Keep Temperature Below 120 °F (≤50 °C)



Keep Relative Humidity Under 70%



Keep Away From Combustible Vapors (gas leaks, etc.)



Avoid Any Corrosive Liquids



Do Not Use Outdoors




Do Not Install Tilted


### Installation Direction




Hang the Product Horizontally

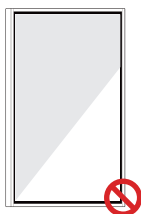

No Vertical Installation



Do Not Install Tilted

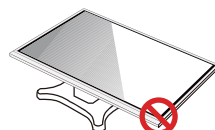

Do Not Lay Flat

# Installation Precautions

## Weight Loading

Weight of the product: 161lb/ 73 kg (86 inch), 123lb/56 kg (75 inch), 99lb/ 45kg (65 inch)

- When using a mobile stand, ensure that the weight of the product is less than the loading capacity of the mobile stand.
- When using the wall-mount bracket, ensure that the wall can support the weight of the product. We recommend that the wall surface be reinforced and have a loading capacity 4 times of the weight of the product. Consult a professional installer for wall-mount installation.


### Note

The company does not undertake relevant legal responsibility for any problems caused by improper operation, if the third party mobile stand, or wall-mount bracket is beyond the scope of the product.

- Do not install the product where it might be hit by an opening or closing door.

## Vertical installation

When installing, try to keep the product vertical. The vertical tilt range allowed for wall-mount installation is  $\pm 3$  degrees. An excessive tilt angle may cause the screen glass to fall off or the product to collapse.

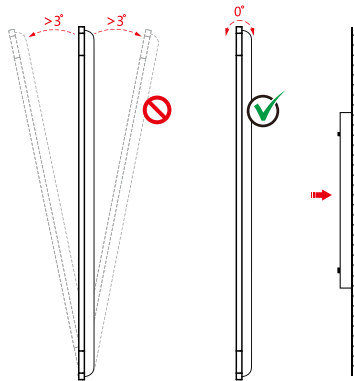


### Note

For any problem, please contact our support desk. Our company is not responsible for any damage or losses incurred by users if the users fails to follow the instructions.



## Ventilation

Ensure adequate ventilation and/or an air conditioned environment. We recommend keeping certain distances from the side of the product to the wall or panels. Ventilation requirements are shown in following figure.

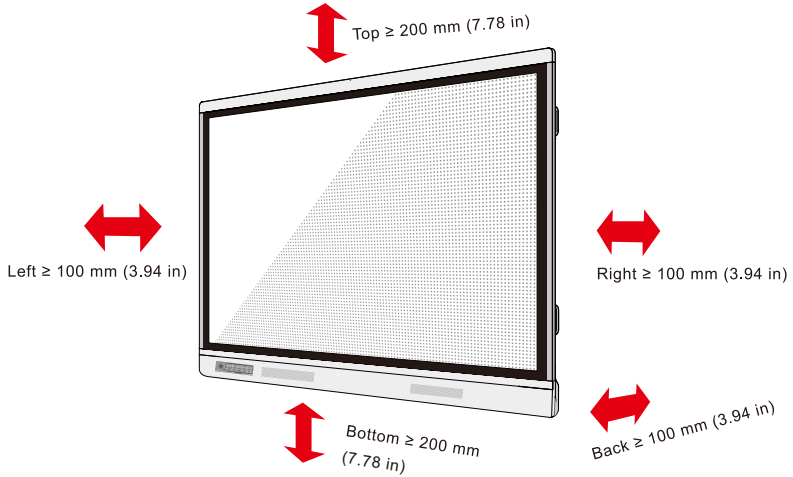


# Installation

The dimensions of the four bracket mounting holes on the back panel are VESA MIS-F-compliant (86 inch or 75 inch: 800 x 400 mm/31.50 x 15.75 in; 65 inch: 600 x 400 mm/23.62 x 15.75 in). Use metric M8 screws with a length of 10 mm to 15 mm (0.40 to 0.59 in) to secure the touch screen to the mounting system. Dimensions of the mounting holes on the back panel are shown on the following figure.


## Note

Consult a professional installer to install the display product.

- 75 inch / 86 inch

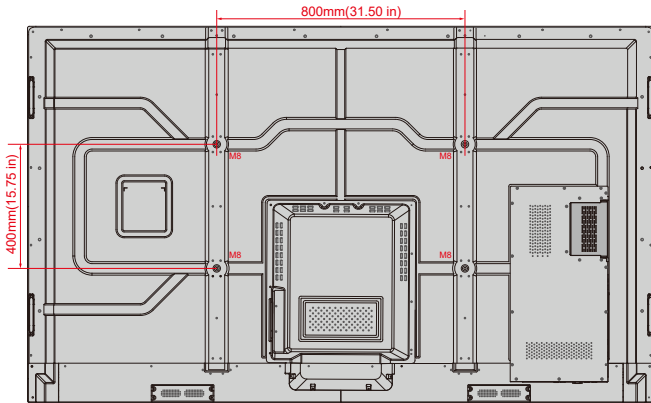

- 65 inch

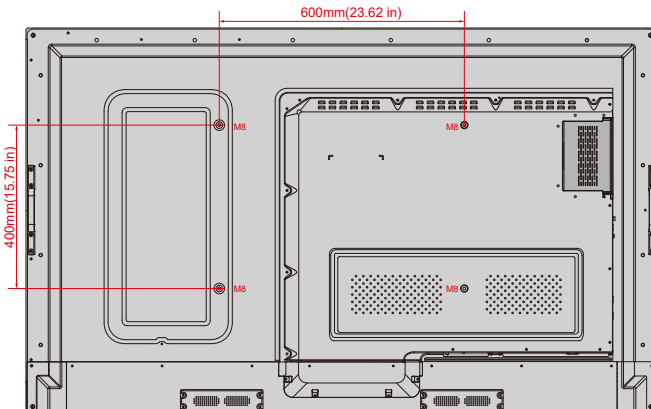

## Installing the Internal PC (Optional)




### CAUTION


The internal PC does not support hot plugging. Therefore, you must insert or remove the internal PC when the display is powered off. Otherwise, the display or internal PC may be damaged.

You will need to purchase the internal PC separately. Perform the following steps to install the internal PC.


Step 1: Unscrew the M3 screws by hand to remove the internal PC shielding cover.

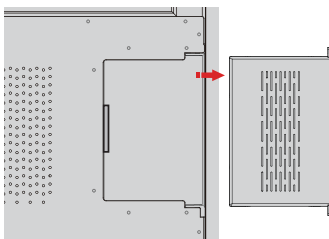


Step 2: Push the internal into the internal PC port at the rear of the screen from right to left.

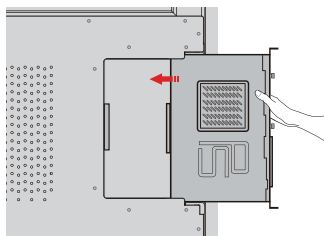

Step 3: Secure the internal PC to the display by using the M3 screws.

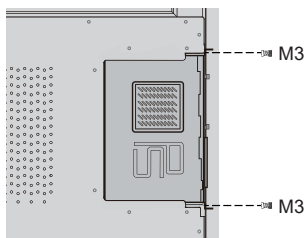

Step 4: Ensure the installation is correct before turning the power on again.

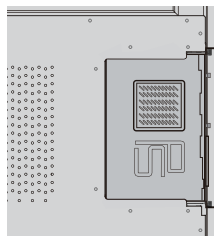

# Turning On/Off

## Power On


Step 1: Plug the power supply into the power outlet fully and plug the power connector into the side of the product. Ensure the power supply is in the range of 100V to 240V with frequency at 50 Hz/60 Hz  $\pm$  5%. The power current must be grounded.

### Note


The power outlet should be installed near the equipment and shall be easily accessible.

Step 2: Flip the power switch located on the side of the product to "On".

• 75 inch / 86 inch

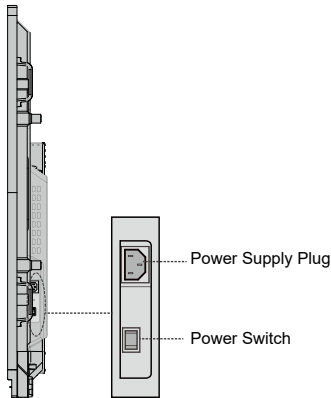

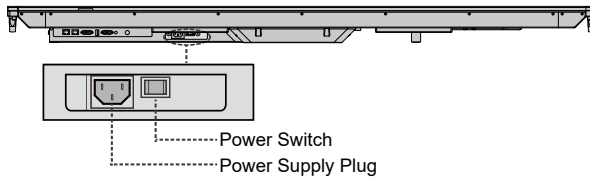


• 65 inch





Step 3: Press the power button  on the front control panel or  on the remote control.

## Power Off

Step 1: Press the power button  on the front panel or the power button  on the remote control. when an internal PC is equipped, the information will be displayed as shown in the following figure.

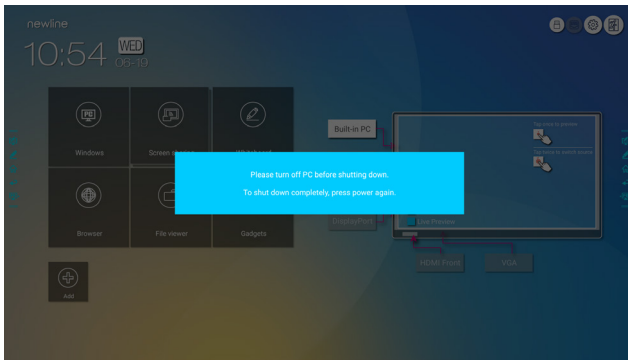

Step 2: Press the power button  on the front panel or the power button  on the remote control again, the power indicator will turn to red.

Step 3: If you are not going to use the product for an extended period of time, we recommend you switch the power switch to “Off”.


### Note

- If an internal PC is equipped, the internal PC and the screen are powered off simultaneously when you power off the display.
- Do not forcibly disconnect the power supply of the display when the internal PC is on.

# Operating the Touch Screen

## Start Screen

When the product is turned on, the product will show the Start Screen page, as shown in the following figure:

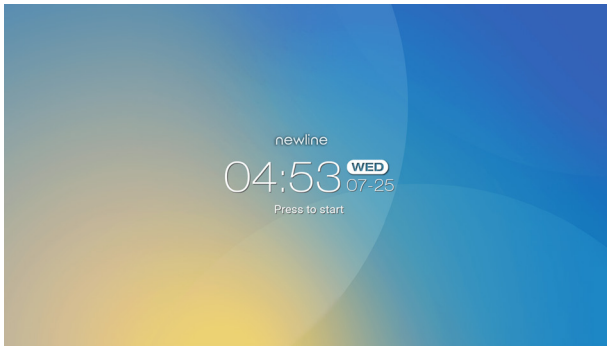

## Home









Touch anywhere on the Start Screen to start a meeting, and the product will go to the Home page, as shown in the following figure:



- 1 Logo (Shortcut to Settings)
- 2 Clock (Shortcut to Clock)
- 3 Date and Week
- 4 Side Toolbar

- 5 Status Bar and Settings
- 6 Main Icon
- 7 Preview Window for Signal Source

## Main Icon


Icon	Functions
	Switch to the internal PC source.
	Click “Screen sharing” to enable the wireless screen sharing function. Note: By default, the “ <b>Screen sharing</b> ” icon is displayed after startup. When you click “ <b>Add</b> ” or “ <b>Gadget</b> ” icon, “ <b>Screen sharing</b> ” switches to the “ <b>Connection</b> ” icon.
	Click <b>Connection</b> to view the connected sources, including Built-in PC, HDMI 1, HDMI 2, DisplayPort, HDMI Front and VGA.
	<b>Whiteboard</b> takes you to the whiteboard function and screen annotation functions.
	Click to enter a quick-access browser.
	Open the File Manager to explore internal and external files on the display.
	Gadget displays all pre-installed applications, including <b>Browser, Music, Keyboard, Calculator, E-mail, File Viewer, Office Viewer and Newline Cast...</b> etc. Click the icon of an application to run the application.
	Click <b>Add</b> to customize the Home page. You can add up to 5 shortcuts to your favorite software, gadgets or connections. (See more detail in “Add Shortcuts to Home Page”)

### Note

If the meeting notes cannot be saved to a USB flash memory successfully after the meeting, use a USB flash drive smaller than 16 GB and change the file system into FAT 32 format.

## Side Toolbar

The Annotation Mode, Whiteboard, Home, Return, and Windows icons are displayed by default in the toolbar on both sides of the screen. You may hide one or both side toolbars in the Settings or move it up and down on the screen, shrink or expand by using touch gestures. You may double-tap the “=” to expand or shrink the toolbar. Long press the customized icon to unfold level-2 icons.

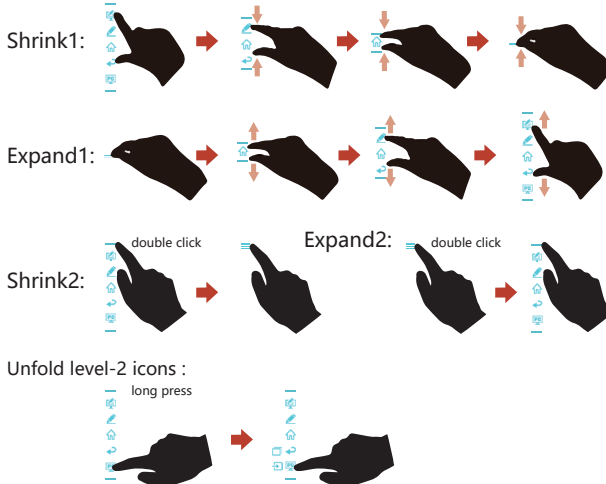






The functions of the side toolbar are as follows:

Icon	Functions
	Enter annotation mode, and click again to stop annotation and take a screenshot.
	Access whiteboard mode.
	Go to Home page.
	Return to the previous menu/Exit an app.
	Go to the internal PC source.
	Manage currently running applications. Slide up/down the currently running application or click “x” at the upper right corner to close the application.
	Go to your favorite source. You can set favorite source in the “tool bar” submenu in the system settings.




## Status Bar and Settings


The upper right corner of the home page displays three working status icons (including USB drive(s), Ethernet, and Wi-Fi), system setting shortcut and return to the start screen page.

Icon	Functions
	If USB drive is connected to the USB port, this icon will appear.
	If the product is connected to Ethernet, the icon will appear.
	If the product is connected to a wireless network, the icon will appear.
	Access the system setting page.
	Return to the Start Screen page.



# Add Shortcut


## Add Shortcuts to Home Page

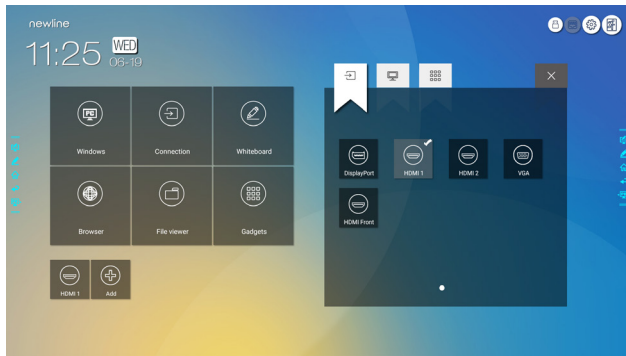Step 1: On **Home** page, click the  icon in the lower right corner. The interface for adding shortcuts will be displayed.



Step 2: Click the icons on top to switch the list between external signal sources, Windows software shortcuts and pre-installed gadgets.

- Click  to view signal sources in **Connection**.
- Click  to view the Windows software shortcuts that the Newline Assistant uploads to the embedded operating system. For details, see “Add Quick Start Windows Programs in Smart System”.

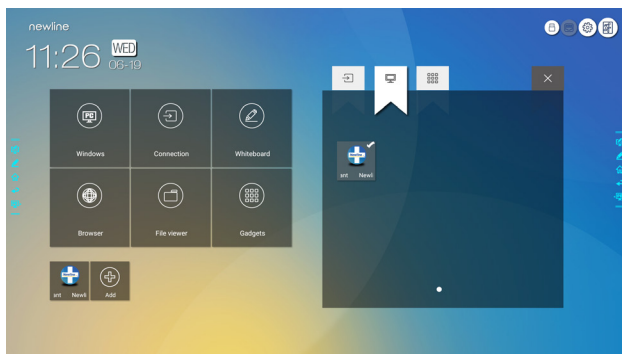

- Click  to view all Gadget applications.



Step 3 : Add or delete applications on the tab.

- In the list, click the icon to add it as a shortcut on the **Home** page. A check icon will appear at the upper right corner of the shortcut icons. Up to 5 shortcuts can be added.
- Tap the icon with the check mark again. The check icon will disappear and the shortcut will be removed from the **Home** page.

Step 4: At the **Home** page, click the shortcut icon and you can start the program/ application or change to the external signal source.

## Newline Assistant

### Introduction

The Newline Assistant is the tool used as a bridge between the embedded operating system and the Internal PC (OPS). It helps add Windows software shortcuts to the Home Page, as well as to protect USB data when switching between sources.

Therefore we strongly recommend users install the Newline Assistant after installing the internal PC.

### Installation


Step 1: Connect Internal PC correctly (See also "Installing the Internal PC (Optional) ").

Step 2: On the **Home page**, click **Windows**. It will switch the signal source to Internal Windows system.

Step 3: Visit our website at [www.newline-interactive.com](http://www.newline-interactive.com) and choose **Products > RS series > download** to download the Newline Assistant installation package.


Step 4: Install the Newline Assistant as instructed.



## Add Quick Start Windows Programs in Smart System

Step 1: In Windows, run the **Newline Assistant** program and drag the software icons or folder shortcut icons that you want to add from the desktop or menu to the **Newline Assistant** window. The applications added or deleted through the Windows system will be automatically updated to the embedded operating system until the upload progress reaches 100%. If there is an application not updated, click  in the upper right corner to manually update all icons in the Newline assistant window to the smart system.

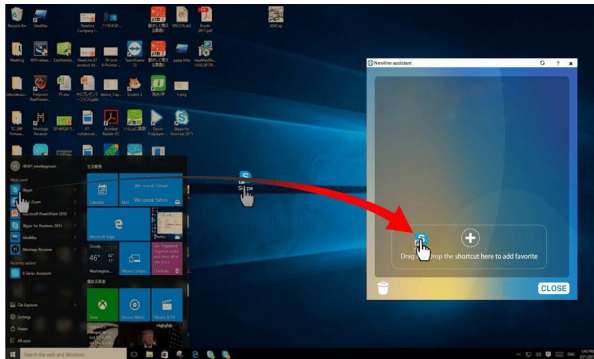


Only folders and .exe file are supported.




Step 2: Click  to return to the **Home** page. Click the  icon and go to the shortcut setting. The page for adding application program will be displayed.



Step 3: At the shortcut setting page, click  icon to view all the Windows software shortcuts added by the Newline Assistant in Step 1.

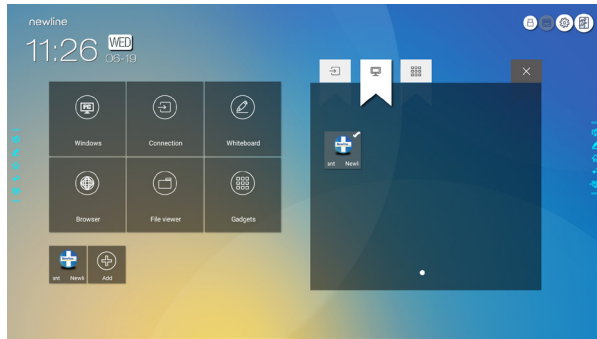

### Note

By default, the Newline Assistant application is added on the  tab.

Step 4: Tap the icon and add the shortcut at the Home page. Tap again and remove it.

Step 5: Return to **Home** page. Click the icon of an added Windows application to start the software.

# Quick Setting Menu

Using two fingers to swipe up from the bottom of the screen, the Quick Settings menu will appear, as shown in the following figure.



Icon	Functions
	Drag the slider to adjust the brightness.
	Drag the slider to adjust the volume.
	Click the icon to return to Home page.
	Click the icon to enter the settings page.
	Click the icon to turn on/off the Smart system Wi-Fi.
	Click the icon to mute/unmute.
	Click the icon to turn on/off the beep sound.
	Click the icon to enable sound only mode. In sound only mode, the screen LCD displays and LED backlight turns off, other functions are in normal operating condition.
	Click the icon to turn on/off the left toolbar.
	Click the icon to turn on/off the right toolbar.
	Click the icon to turn on/off the blue light filter.





# More Information

---

## **For more information**

Please visit our website ([www.newline-interactive.com](http://www.newline-interactive.com)) for detailed instruction manual.

## **Contact Us for Support**

Please email us at [support@newline-interactive.com](mailto:support@newline-interactive.com).